 **Door Locks**

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.


For details the entry function or wireless remote control (→P.17, 18)

Door lock switch



- 1 Locks all the doors
- 2 Unlocks all the doors

Inside lock button

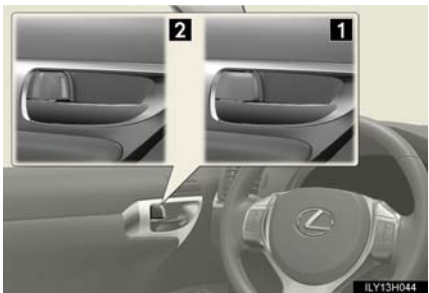

- 1 Locks the door
 - 2 Unlocks the door
- The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

Rear door child-protector lock




The door cannot be opened from inside the vehicle when the lock is set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Power Windows

Power window switches

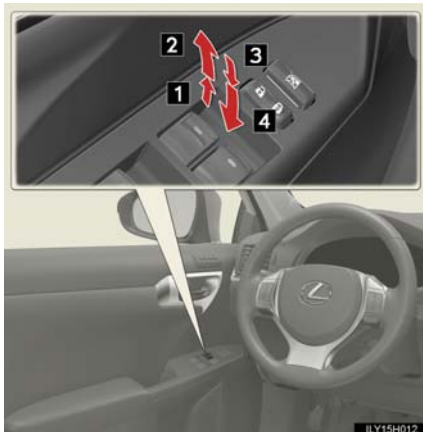

- 1 Closing
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*

*: To stop the window partway, operate the switch in the opposite direction.

Window lock switch




Press the switch down to lock the passenger window.

Use this switch to prevent children from accidentally opening or closing a passenger window.

Moon Roof (if equipped)

■ Opening and closing

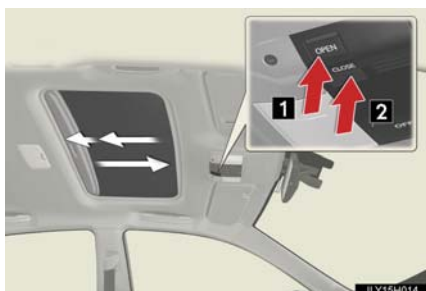

1 Opens the moon roof*

Push and hold "OPEN" for more than 1 second. The moon roof tilts up and then opens automatically.


2 Closes the moon roof*

Push and hold "CLOSE" for more than 1 second. The moon roof closes automatically and stops slightly before the tilt up position.

Push and hold "CLOSE" again to fully close the moon roof.

*: Lightly press either of the moon roof switches to stop the moon roof part-way.

■ Tilting up and down

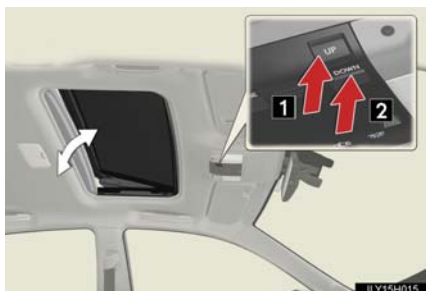

1 Tilts the moon roof up*

2 Tilts the moon roof down*

*: Lightly press either of the moon roof switches to stop the moon roof part-way.

Fuel Tank Cap

■ Before refueling the vehicle

Turn the "POWER" switch off and close all the doors and windows.


■ Opening the fuel tank cap



- 1 Press the opener to open the fuel filler door.



- 2 Turn the fuel tank cap slowly to open.

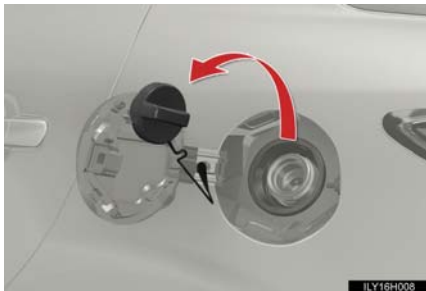

- 3 Hang the fuel tank cap on the back of the fuel filler door.